



APPLICATION PROCEDURE
ULTRAM POLITUR P - 01 for interior



Kempes Wood WF - 115 Komper
P - 01 Teak
Kuas II 1st Coat
P - 01 Teak
Kuas II 2nd Coat
P - 01 Teak
Tas Coat
P - 01 Clear Glass
P - 01 Clear Oil

ULTRAM POLITUR P - 03 UV for exterior



Kempes Wood
Kuas III 1st Coat
P - 03 UV Teak
Kuas III 2nd Coat
P - 03 UV Teak
Kuas III 3rd Coat
P - 03 UV Teak

* For better weathering resistance, it's recommended to use Ultram Resinair (UPF-85)

COLORS OF ULTRAM POLITUR P - 01
TRANSPARENT COLORS



P - 01 Solar Yellow

P - 01 Solar Red

P - 01 Mahogany

P - 01 Brown KJ

P - 01 Brown AR

COLORS OF ULTRAM POLITUR P - 03 UV
TRANSPARENT COLORS



P - 03 UV Solar Yellow

P - 03 UV Solar Red

P - 03 UV Mahogany

P - 03 UV Brown KJ

P - 03 UV Brown AR

gadis |


gadis |



P - 01 Solar Brown

P - 01 Dark Brown

APPLICATION ON TEAK WOOD

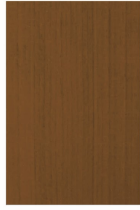

NATURAL


P - 03 UV Natural Glass

P - 03 UV Natural Oil

For final top coat only

Application procedure :
1. Sandpaper (by brush)
2. Wood Filler WF - 115 Komper
3. Ultram Politur P - 01 Solar Yellow (by spray)
4. Ultram Politur P - 01 Solar Yellow (by spray)
5. Ultram Politur P - 01 Clear Glass (by spray)

APPLICATION ON SUNGAI WOOD

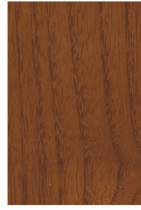

Application procedure :
1. Sandpaper
2. Wood Filler WF - 115 Komper
3. Ultram Politur P - 01 Solar Yellow (by spray)
4. Ultram Politur P - 01 Back (by spray)
5. Ultram Politur P - 01 Clear Glass (by spray)

OXIDE COLOR

P - 03 UV Mahoe

P - 03 UV Forest Oak

P - 03 UV Red Oak

P - 03 UV Red Wood

P - 03 UV Mahoe

gadis |



• Warna-warna ini dibuat mendekati aslinya
• The colors on this card are as to actual paint colors